TOSHIBA

Leading Innovation >>>

General Safety Instructions for Data Storage Products

These general safety instructions are prepared and intended to accommodate a number of data storage products. Certain instructions may not be applicable to your product. Please be sure to read the documentation that was provided with your product.

<u>AWARNING</u> Indicates a potentially hazardous situation which, if not avoided, could result in serious injury.

Product Damage

Do not use the Product if it has been dropped, subjected to shock or impact, and/or damaged in some way.

Do not use the Product if it has noticeable signs of overheating, smoke, deformation, cracks, leaks, or unusual odor.

Choking Hazards

Keep the Product away from small children. This Product is not a toy and may be hazardous to small children, for example, small detachable parts may be a choking hazard.

Disassembly, Modification or Tampering

Do not disassemble, modify, tamper with or repair the Product.

Wireless Functionalities

Turn off the Product and/or all wireless functionalities where electronic devices are regulated or controlled or when near a person with any medical electric devices.

Water and Moisture

Do not use the Product in a wet location. Do not connect/disconnect a power plug/cord with wet hands.

A CAUTION Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

Product Contact

Avoid extended contact between the Product and your skin. The Product may become hot! Avoid prolonged contact to prevent skin irritation and/or heat injury.

Indicates a potentially hazardous situation which, if not avoided, may result in property damage.

Operating Temperatures/Environment

Do not use or expose the Product in or to high or low temperatures, sudden temperature changes, or dusty environments. This could cause system malfunction, loss of data or damage to the Product.

Never operate the Product during a thunderstorm. An electrical surge caused by the storm may cause system failure, loss of data or hardware damage.

Product Care

Do not bump, drop, or jar the Product while it is in operation.

Foreign Objects

Never push a foreign object through an opening in the Product. Never allow metal objects (such as screws, staples, or paper clips) to enter the Product. This could cause a short circuit.

Heat Sources

Keep the Product away from radiators, stoves, heat sources or other equipment that produce heat.

NOTE: Provides important and/or helpful information.

Disposal

Dispose of the Product or any components in compliance with all applicable laws.